

Tension (Flat) Screw Adjustment

The tension (flat) screw is set to the correct setting when it leaves our factory. Many artists are used to setting the screw to a very loose position which causes the blades to close at the wrong angle resulting in damage and dullness.

Please follow the steps below to help insure the longevity of your Fan Out shears.

- Pull one handle (P1) all the way open and slowly let it drop.
- It should move smoothly but not fall into the closed position.
- The opening of the two blades (P2) should stay at a 15° to 23° which is about the same as 10:30 to 11:00 on a clock.
- Turn the screw in small increments at a time to correct the adjustment.
- After adjusting the shears, wiggle the handles and see if the adjustment is still set correctly. Readjust if necessary.

Please feel free to call our customer service department (949) 586-5400 if you have questions.

P1



P2

